

FUSE REPLACEMENT

A fuse may blow if more than 200mA is applied to the V Ω jack ⑤, or more than 10A is applied to the 10A jack ③. To access fuses:

1. Remove screw from battery door.
2. Replace blown fuse(s) with:
 - V Ω (μ A/mA) jack ⑤:** 200mA/600V fast-blow, interrupting rating 1kA (Klein Cat. No. 69031)
 - 10A jack ③:** 10A/600V fast-blow, interrupting rating 10kA (Klein Cat. No. 69032)
3. Replace battery door and fasten securely with screw.

⚠ To avoid risk of electric shock, disconnect leads from any voltage source before accessing fuses.

⚠ To avoid risk of electric shock, do not operate meter while back housing is removed.

